

## **Embedded System Laboratories Pvt. Ltd.**


(An ISO 9001:2015 certified company)

86, Lane No. 7, Near Laxmi Dairy, Gurudwara Road, Jawahar Colony, N.I.T. Faridabad - 121005, Haryana, India

Phone: - +91-129-2230671 Mob. +91-9811482048, 9311482051

E-mail: -eslfaridabad@yahoo.com

## PROXIMITY FITTING AS DUAL CHANNEL ENCODER

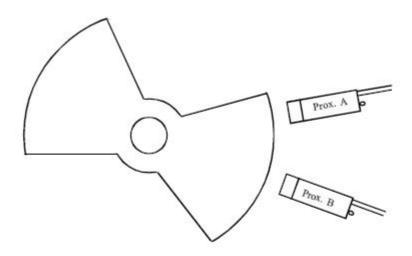

- a) Take a pully and cut it in the above shape. Fit this pully at the input shaft of the gear box of tensile testing machine.
- b) Fix the two proximities according to the above picture so that
  - i) both can be switched ON
  - ii) both can be switched OFF
  - iii) any one of them can be switched ON just by rotating the shaft.

Rotation (Deg.)	Prox. A	Prox. B
0°	OFF	OFF
45°	ON	OFF
90°	ON	ON
135°	OFF	ON
180°	OFF	OFF
225°	ON	OFF
270°	ON	ON
315°	OFF	ON
360°	OFF	OFF